

## ENTONE REMOTE INSTRUCTIONS

### VCR Recording:

- 1) To set VCR channel, look at the number on your Entone remote control battery cover,
  - #1 = Channel 10
  - #2 = Channel 12
  - #3 = Channel 23
- 2) Tune the set top box to the channel you'd like to record using your Entone remote.  
example: if you would like to record channel 54, tune the set top box to channel 54.
- 3) Start recording the channel as outlined in your VCR's manual.
- 4) Stop the recording when desired.

### VCR Playback:

- 1) This depends on how your VCR is connected to your TV:
  - COAX Cable:** tune your TV to Channel 3 or 4  
This varies depending on make/model, sometimes a switch on the back of the VCR or some may be settable within the VCR's menus. Refer to VCR manual for more info.
  - RCA Cables** (yellow, red, white connectors): change your TV to receive it's signal via the RCA cables, usually called AV/AUX. Refer to TV manual for more information.
- 2) Rewind tape as outlined in VCR manual (so there is something to playback, otherwise you get snow w/o any sound).
- 3) Play tape back as outlined in VCR manual.

## ENTONE REMOTE INSTRUCTIONS

### VCR Recording:

- 1) To set VCR channel, look at the number on your Entone remote control battery cover,
  - #1 = Channel 10
  - #2 = Channel 12
  - #3 = Channel 23
- 2) Tune the set top box to the channel you'd like to record using your Entone remote.  
example: if you would like to record channel 54, tune the set top box to channel 54.
- 3) Start recording the channel as outlined in your VCR's manual.
- 4) Stop the recording when desired.

### VCR Playback:

- 1) This depends on how your VCR is connected to your TV:
  - COAX Cable:** tune your TV to Channel 3 or 4  
This varies depending on make/model, sometimes a switch on the back of the VCR or some may be settable within the VCR's menus. Refer to VCR manual for more info.
  - RCA Cables** (yellow, red, white connectors): change your TV to receive it's signal via the RCA cables, usually called AV/AUX. Refer to TV manual for more information.
- 2) Rewind tape as outlined in VCR manual (so there is something to playback, otherwise you get snow w/o any sound).
- 3) Play tape back as outlined in VCR manual.